

Emergency Bulkhead Surface Ceiling


IP65

Class 1




Lantis Series


Downlighter features	Supply voltage	Part No.
MM3	220-240V AC 50/60 Hz	LANT110LM LANE350LM
MM3 AutoTest	220-240V AC 50/60 Hz	LANT110YL LANE350YL
MM3	220-240V AC 50/60 Hz	LANT110DL LANE350DL
MM3 XT	220-240V AC 50/60 Hz	LANT110XT
NM3	220-240V AC 50/60 Hz	LANT110LN LANE350LN
NM3 AutoTest	220-240V AC 50/60 Hz	LANT110YS LANE350YS
NM3	220-240V AC 50/60 Hz	LANT110DS LANE350DS

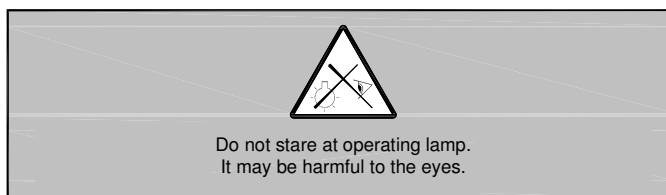

Dimensions

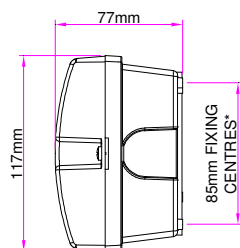


*FIXING HOLES Ø4mm

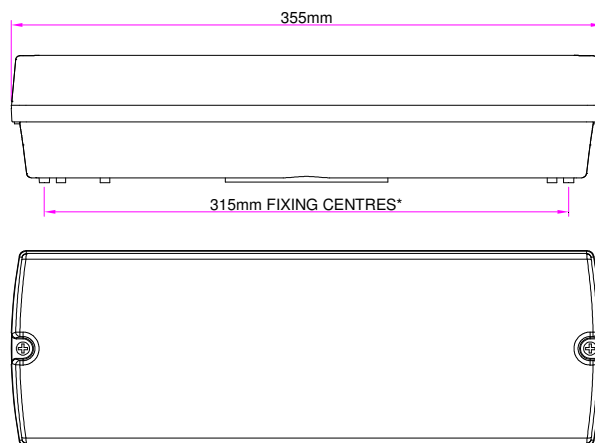


Installation Method


1

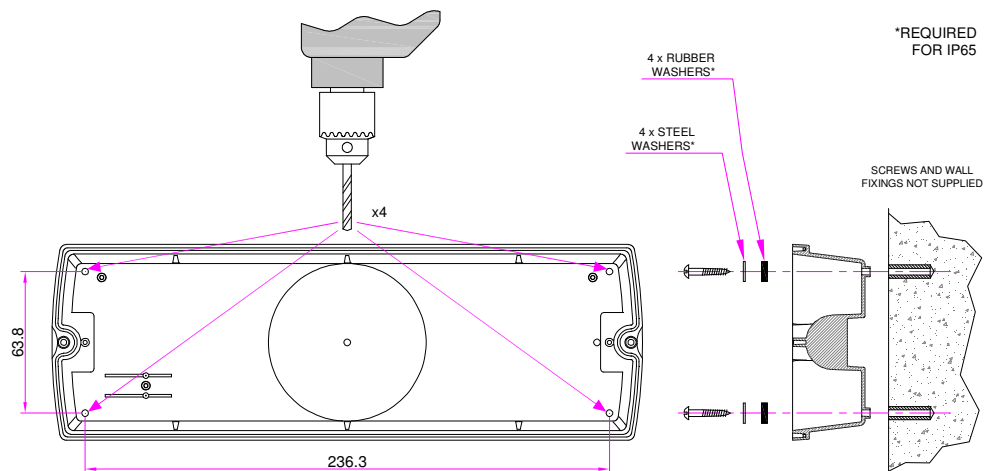

2

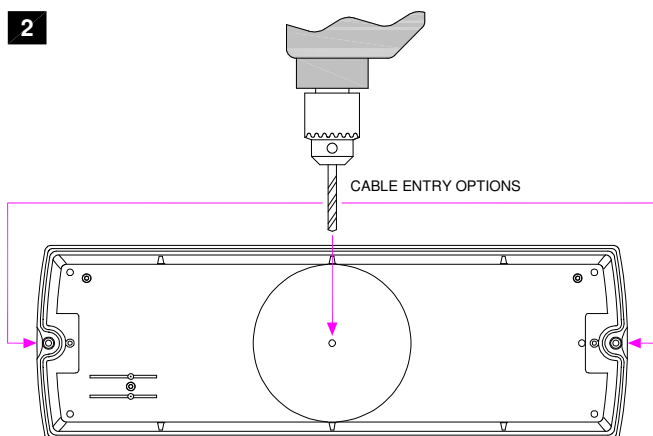


3

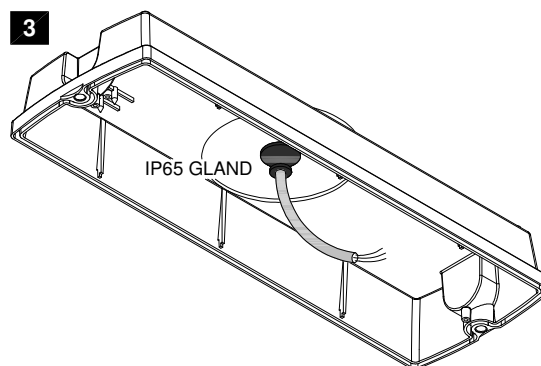


NOTICE TO CONTRACTOR - PLEASE PASS THIS LEAFLET TO THE END-USER.


4

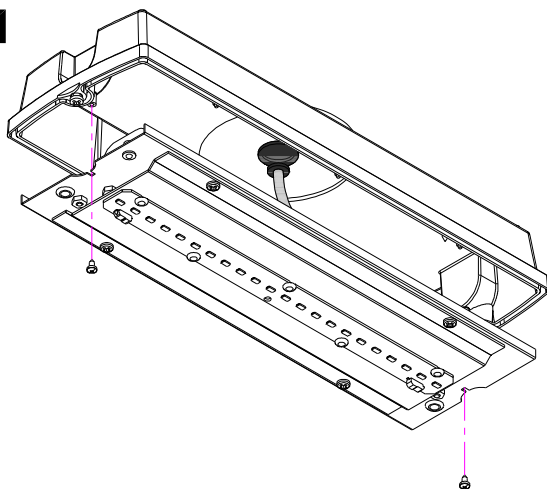

5








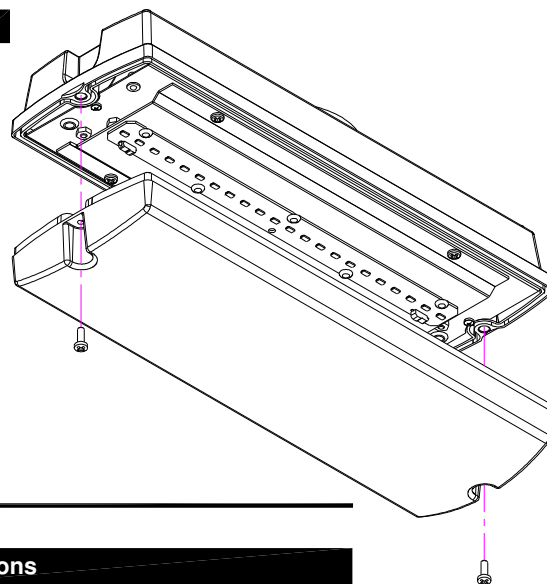


Cleaning Instructions

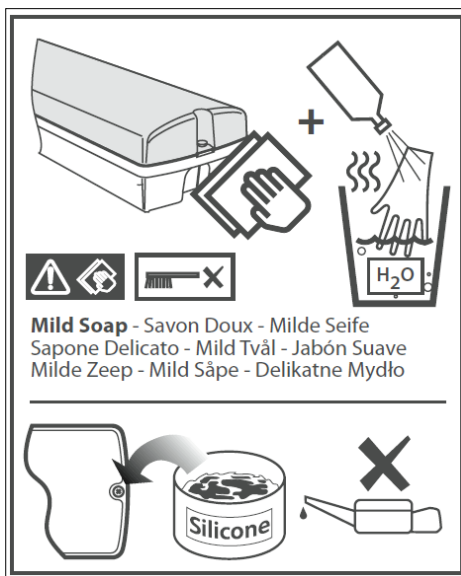

Connections

    (USL=UNSWITCHED LIVE, SL=SWITCHED LIVE)

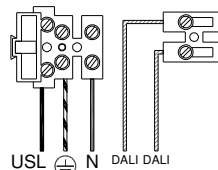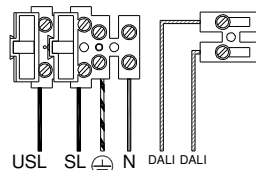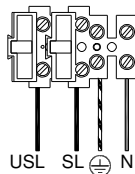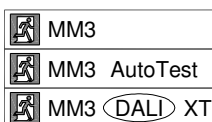

Operation and Maintenance

Continual operation at mains voltages in excess of the rated voltage will reduce LED and expected gear life.

This luminaire uses plastic components in its construction and when installed in environments containing chemicals, degradation may occur.

Please contact our Technical Department for advice.

Modifications

Philip Payne products should not be modified.

Any modification may render the product unsafe and will invalidate any Safety/Approval marks.

Philip Payne will not accept any responsibility for any modified products or for any damage caused as a result of their modification.

Monthly and Annual Tests

Monthly and Annual tests should be carried out in accordance with BS EN 50172:2004, 7.2.

Testing can be carried out by using a sub circuit isolator or by switching off the lighting circuit at the circuit breaker (not for AutoTest or DALI versions).

Battery pack shall be replaced if the specified 3 hour duration is not met.

For replacement battery pack contact Philip Payne Ltd.

The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced.

Important-Safety

Before carrying out any servicing on this luminaire, ensure that the mains supply is fully isolated.

Disconnect luminaire before insulation testing of the installation.

Philip Payne

Philip Payne Ltd

A SUBSIDIARY OF F.W. THORPE PLC
Thornhill Road, Solihull, B91 2HB, England.

Tel: 0121 705 2384

Fax: 0121 711 2469

e-mail: mail@philippayne.co.uk

Website: http://www.philippayne.co.uk

Philip Payne Ltd registered in England No. 1361523



ISO9001
FM55077



21LFT079_3

Emergency Bulkhead Surface Ceiling

IP65




Class 1




Lantis Series

Downlighter features	Supply voltage	Part No.
NM3	220-240V AC 50/60 Hz	LANT300LN
NM3 AutoTest DALI	220-240V AC 50/60 Hz	LANT300DS

Dimensions

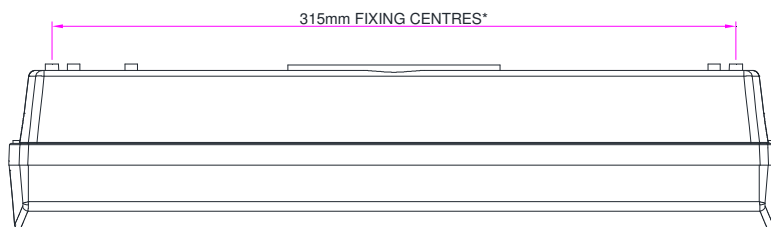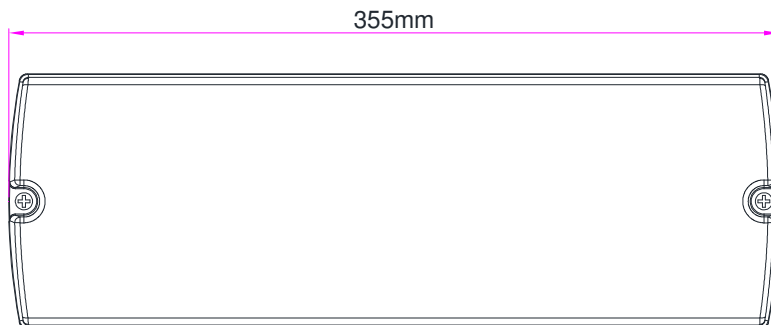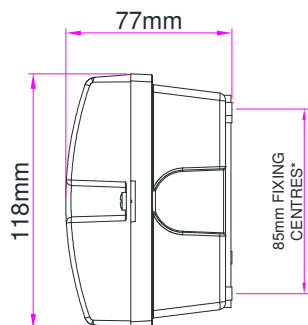

*FIXING HOLES Ø4mm

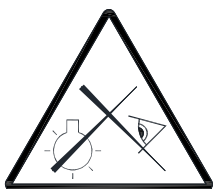


Do not stare at operating lamp.
It may be harmful to the eyes.

Connections




NM3

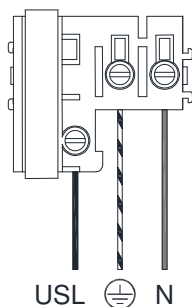

(USL= UNSWITCHED LIVE)




NM3 AutoTest DALI

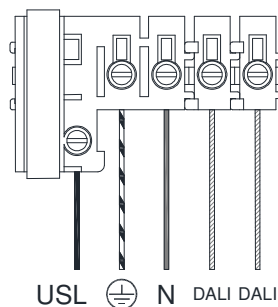


NOTICE TO CONTRACTOR - PLEASE PASS THIS LEAFLET TO THE END-USER.

Installation Method


1

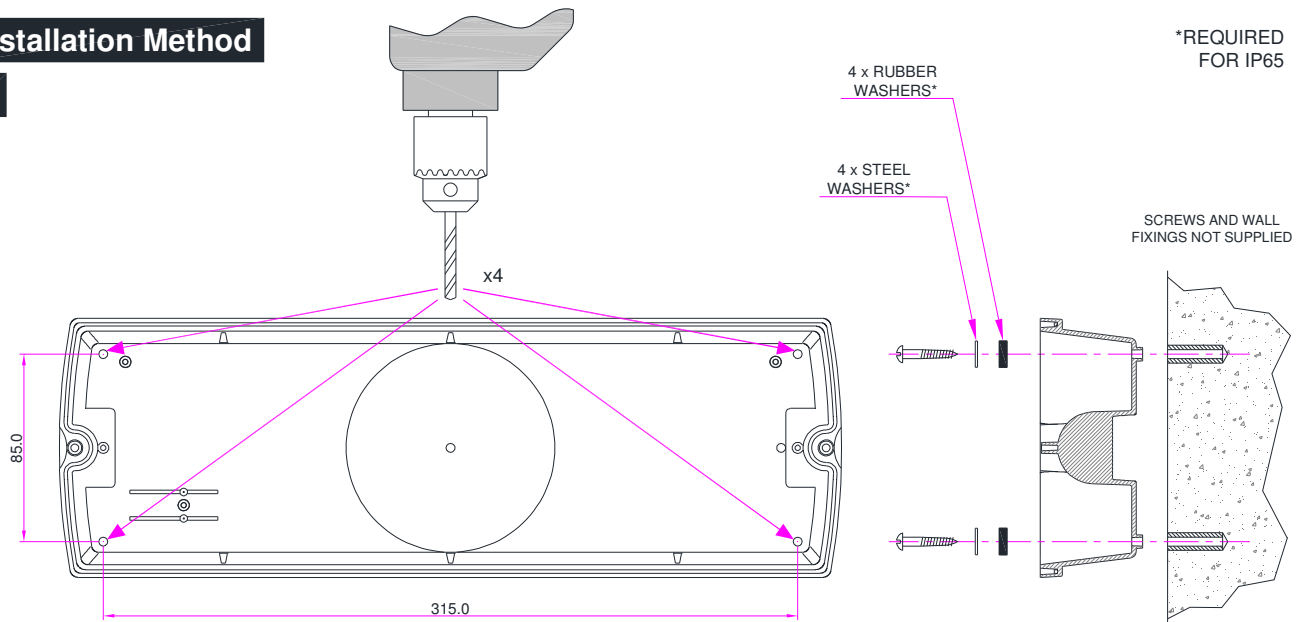


2

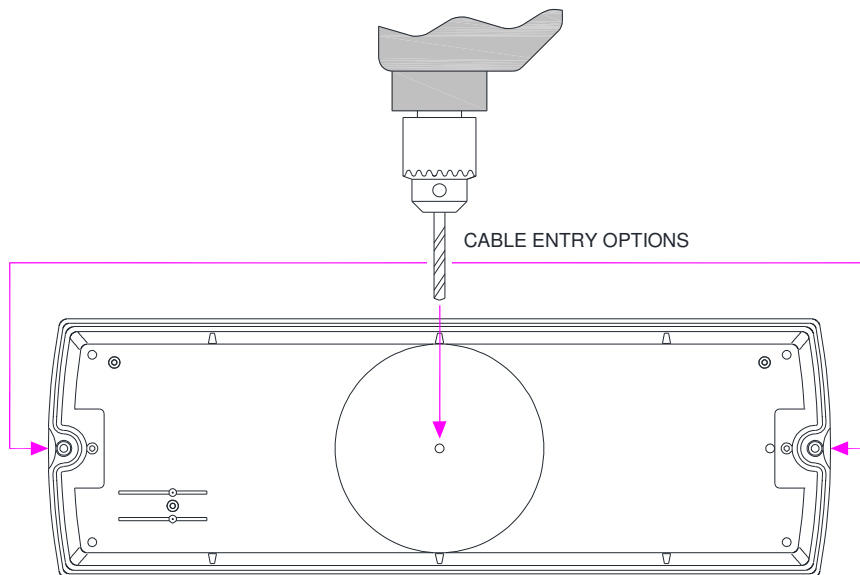

3

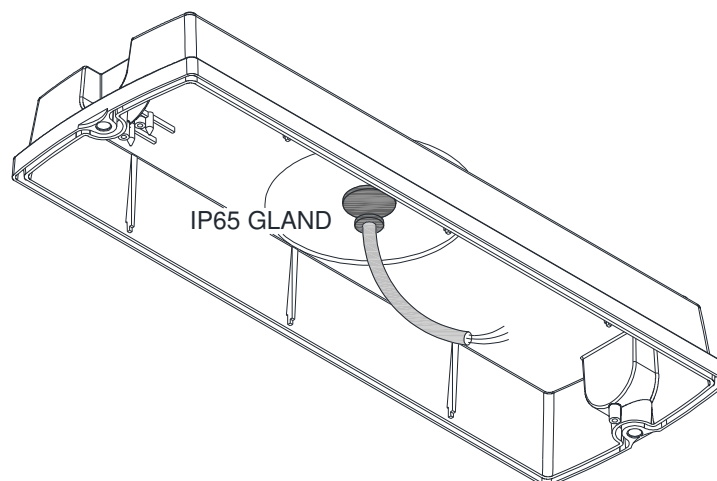


4

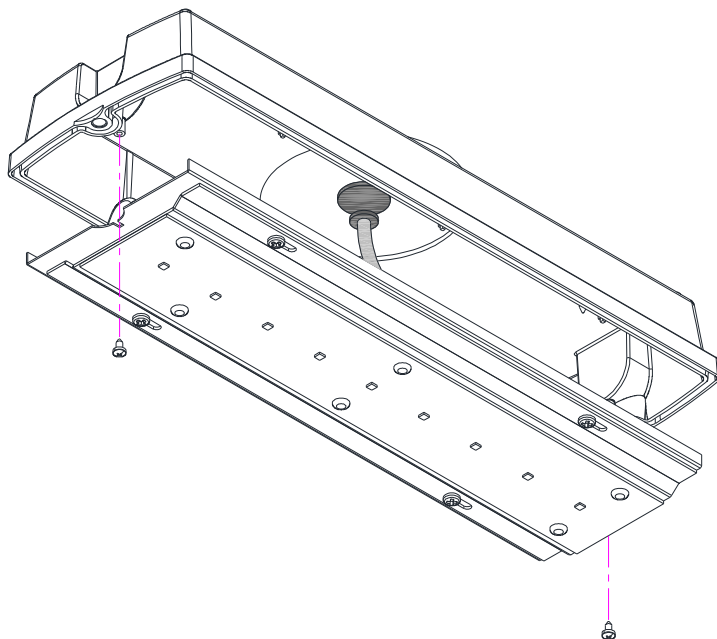


x4

LOOSEN SCREWS ENOUGH TO
ALLOW LED BRACKET TO SLIDE.
RE-TIGHTEN SCREWS ONCE
GEAR-TRAY IS FIXED IN PLACE.

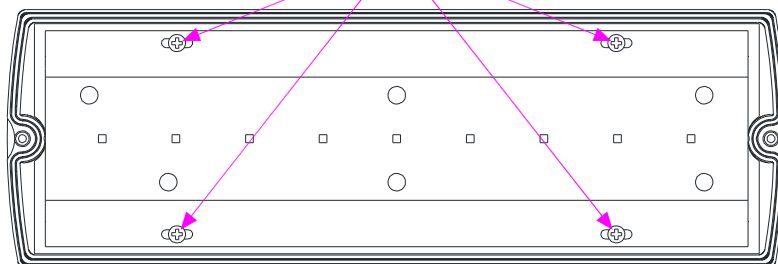


SLIDE

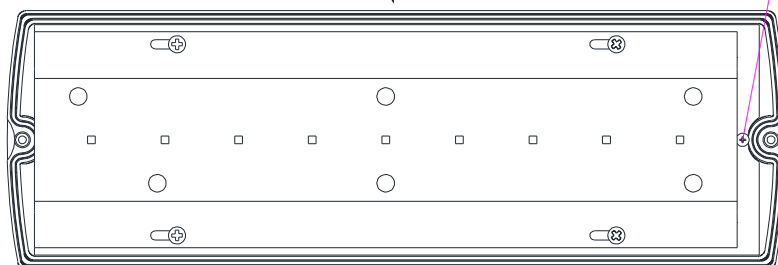

SLIDE LED BRACKET
ACROSS TO REVEAL
GEAR-TRAY FIXING
SCREW.


x1

SLIDE

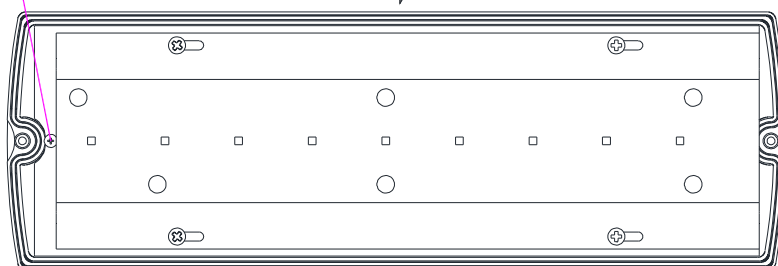

SLIDE LED BRACKET
ACROSS TO REVEAL
GEAR-TRAY FIXING
SCREW.

x1

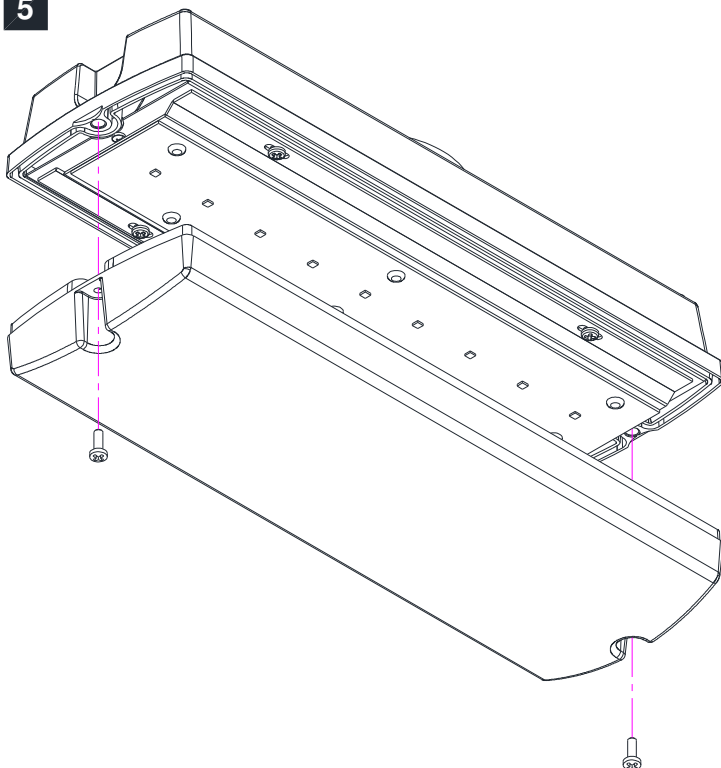

Cleaning Instructions



Operation and Maintenance

Continual operation at mains voltages in excess of the rated voltage will reduce LED and expected gear life.

This luminaire uses plastic components in its construction and when installed in environments containing chemicals, degradation may occur.

Please contact our Technical Department for advice.

Modifications

Philip Payne products should not be modified.

Any modification may render the product unsafe and will invalidate any Safety/Approval marks.

Philip Payne will not accept any responsibility for any modified products or for any damage caused as a result of their modification.

Monthly and Annual Tests

Monthly and Annual tests should be carried out in accordance with BS EN 50172:2004, 7.2.

Testing can be carried out by using a sub circuit isolator or by switching off the lighting circuit at the circuit breaker (not for AutoTest or DALI versions).

Battery pack shall be replaced if the specified 3 hour duration is not met.

For replacement battery pack contact Philip Payne Ltd.

The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced.

Important-Safety

Before carrying out any servicing on this luminaire, ensure that the mains supply is fully isolated.

Disconnect luminaire before insulation testing of the installation.



Philip Payne Ltd

A SUBSIDIARY OF F.W. THORPE PLC
Thornhill Road, Solihull, B91 2HB, England.

Tel: 0121 705 2384

Fax: 0121 711 2469

e-mail: mail@philippayne.co.uk

Website: http://www.philippayne.co.uk



Philip Payne Ltd registered in England No. 1361523



ISO9001
FM55077




21LFT077_1

Downlighter features	Supply voltage	Part No.
	220-240V DC/AC 50/60 Hz	LANT350LA LANE350LA
	220-240V DC/AC 50/60 Hz	LANT350DA LANE350DA




Do not stare at operating lamp.
It may be harmful to the eyes.

Dimensions

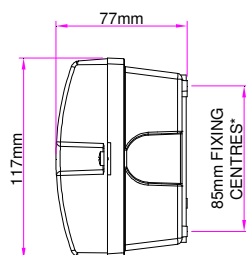


*FIXING HOLES Ø4mm

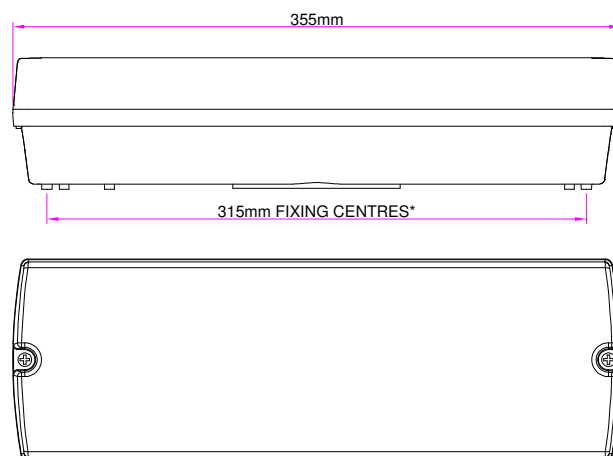


Installation Method


1

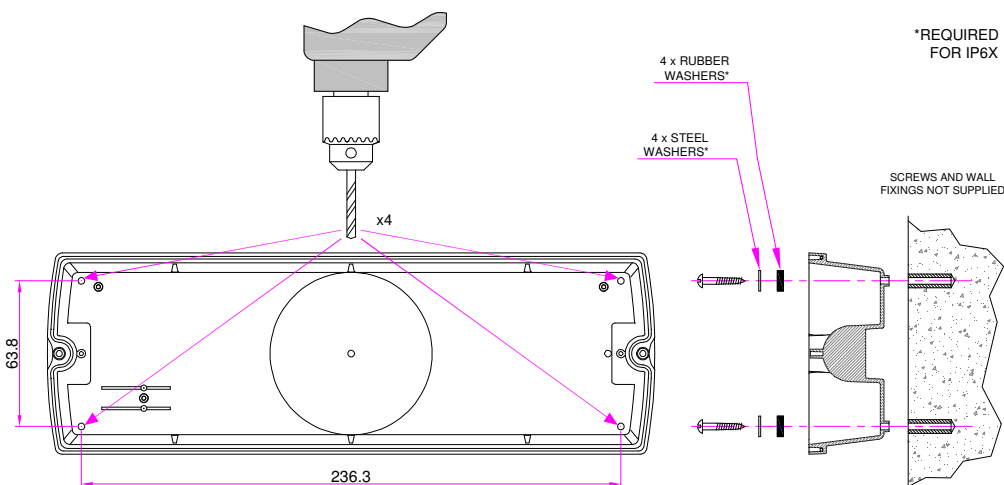

2

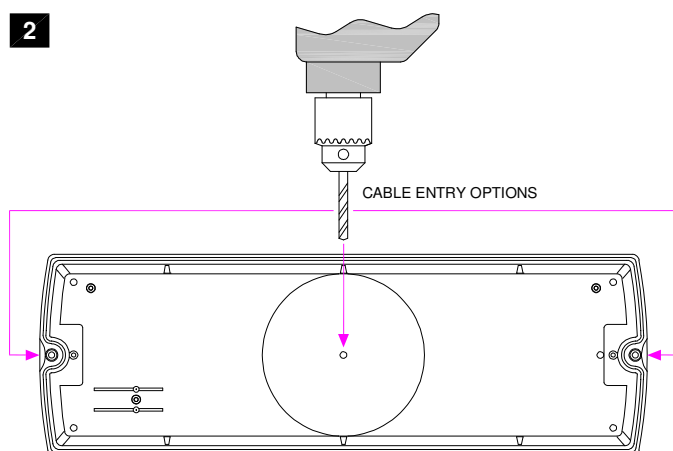


3

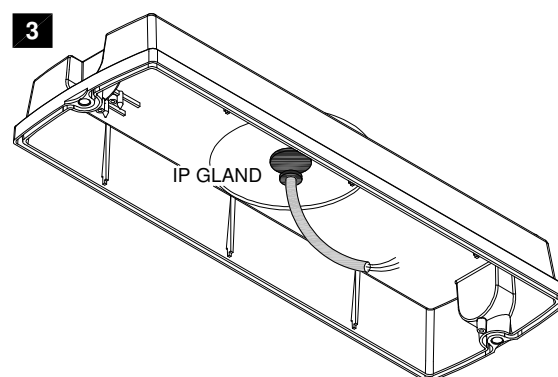


NOTICE TO CONTRACTOR - PLEASE PASS THIS LEAFLET TO THE END-USER.


4

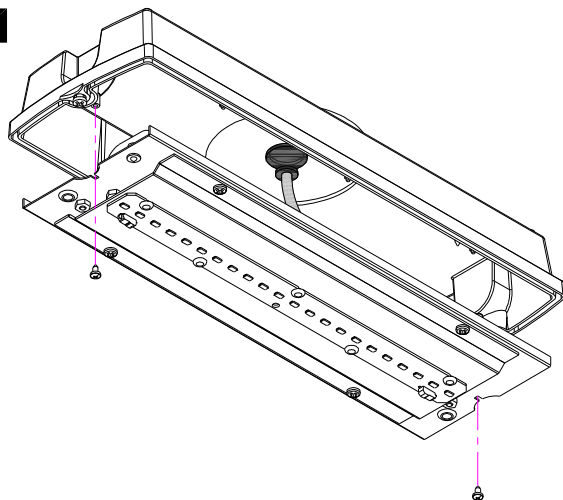



5

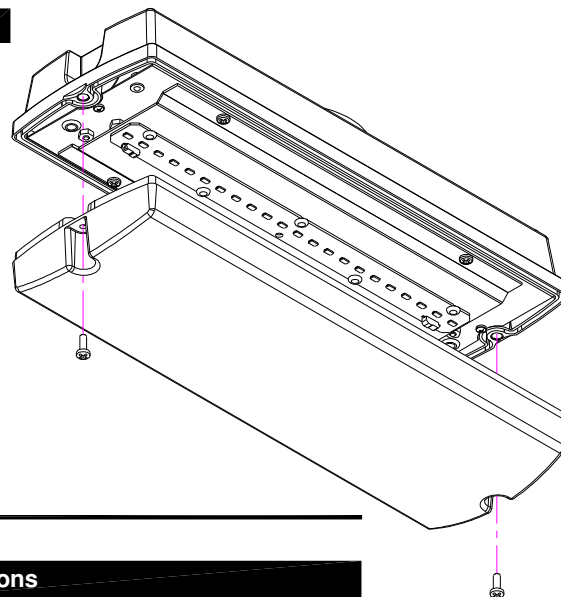

Cleaning Instructions

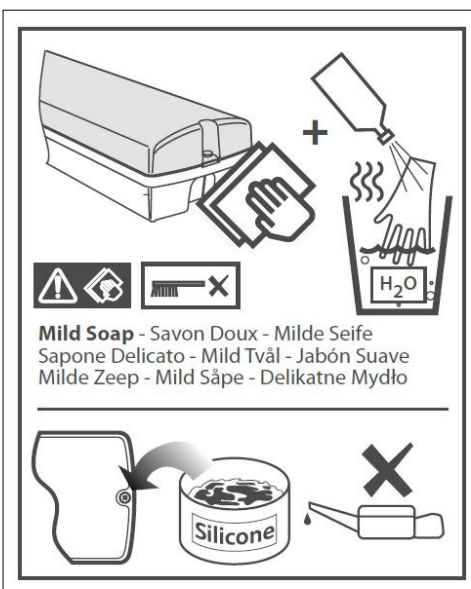

Connections

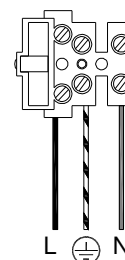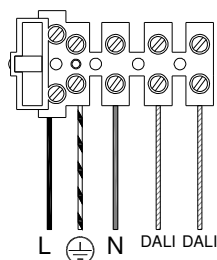

Operation and Maintenance

Continual operation at mains voltages in excess of the rated voltage will reduce LED and expected gear life.

This luminaire uses plastic components in its construction and when installed in environments containing chemicals, degradation may occur.

Please contact our Technical Department for advice.

Modifications

Philip Payne products should not be modified.

Any modification may render the product unsafe and will invalidate any Safety/Approval marks.

Philip Payne will not accept any responsibility for any modified products or for any damage caused as a result of their modification.

Monthly and Annual Tests

Monthly and Annual tests should be carried out in accordance with BS EN 50172:2004, 7.2.

Testing can be carried out by using a sub circuit isolator or by switching off the lighting circuit at the circuit breaker (not for AutoTest or DALI versions).

Battery pack shall be replaced if the specified 3 hour duration is not met.

For replacement battery pack contact Philip Payne Ltd.

The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced.

Important-Safety

Before carrying out any servicing on this luminaire, ensure that the mains supply is fully isolated.

Disconnect luminaire before insulation testing of the installation.



Philip Payne Ltd

A SUBSIDIARY OF F.W. THORPE PLC
 Thornhill Road, Solihull, B91 2HB, England.

Tel: 0121 705 2384

Fax: 0121 711 2469

e-mail: mail@philippayne.co.uk

Website: http://www.philippayne.co.uk

Philip Payne Ltd registered in England No. 1361523



ISO9001
 FM55077



21LFT078_3