

**Emergency Bulkhead
Surface Ceiling**

IP65


Class 1




Lantis Series

Downlighter features	Supply voltage	Part No.
MM3	220-240V AC 50/60 Hz	LANT110LM
MM3 AutoTest	220-240V AC 50/60 Hz	LANT110YL
MM3 (DALI)	220-240V AC 50/60 Hz	LANT110DL
NM3	220-240V AC 50/60 Hz	LANT110LN
NM3 AutoTest	220-240V AC 50/60 Hz	LANT110YS
NM3 (DALI)	220-240V AC 50/60 Hz	LANT110DS

Dimensions

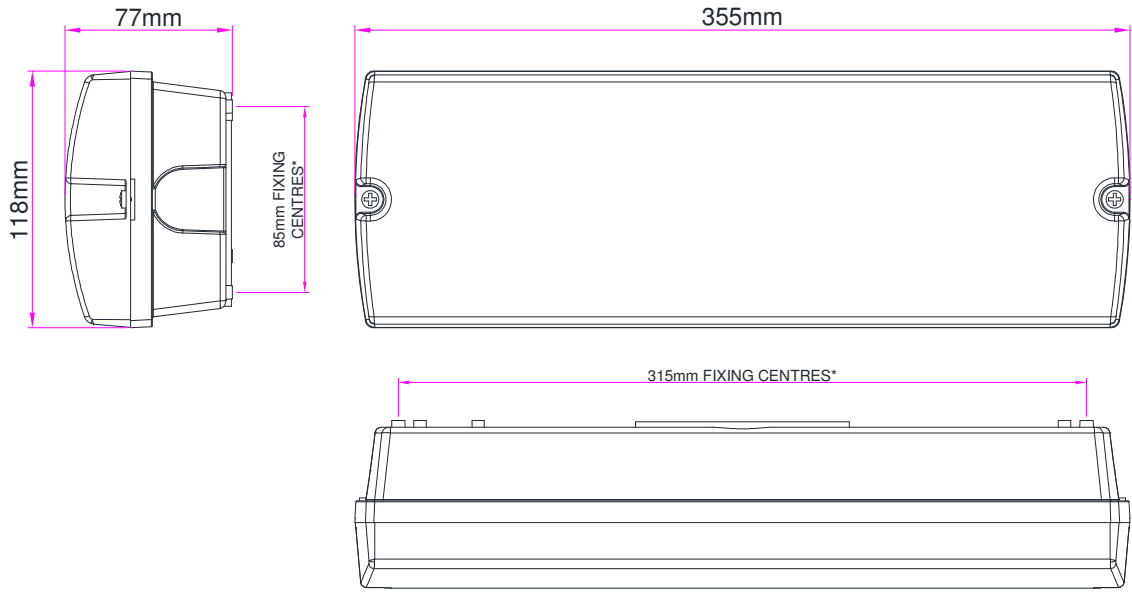








*FIXING HOLES Ø4mm

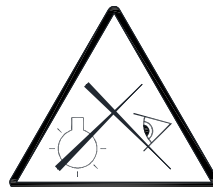

Do not stare at operating lamp.
It may be harmful to the eyes.

NOTICE TO CONTRACTOR - PLEASE PASS THIS LEAFLET TO THE END-USER.

   
Connections

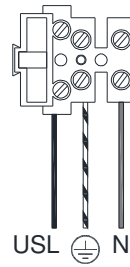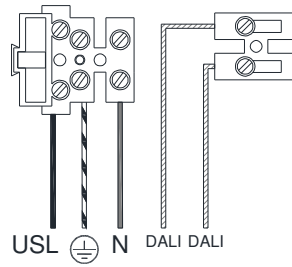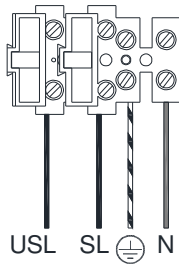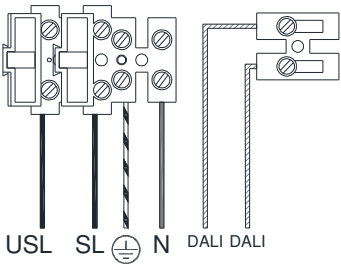


(USL=UNSWITCHED LIVE, SL=SWITCHED LIVE)

Installation Method


1

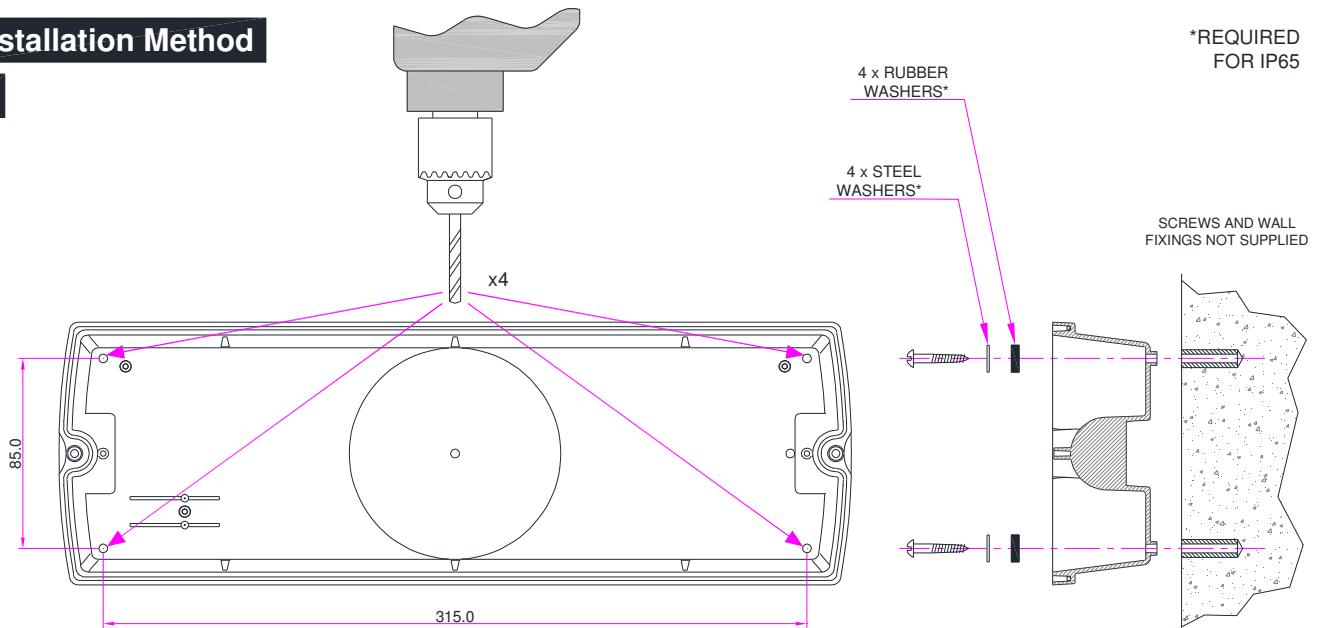


2

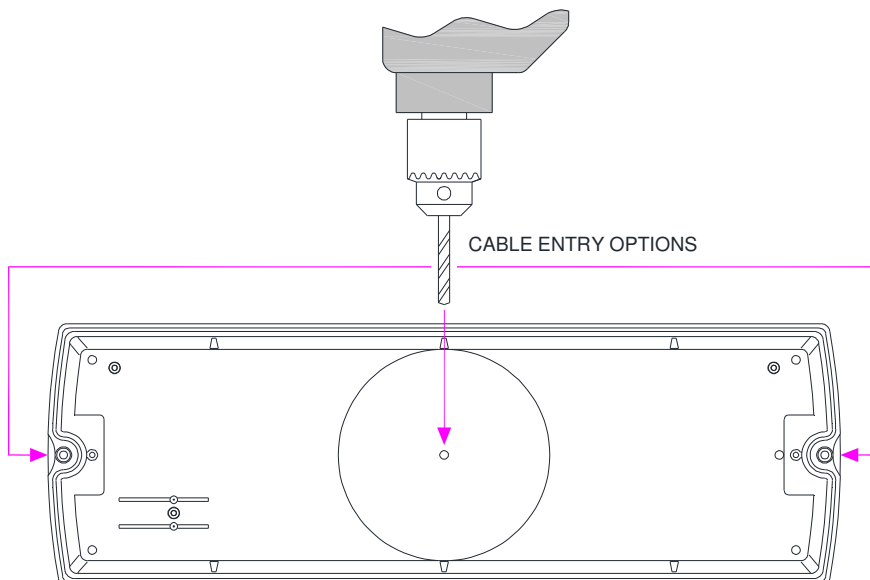


3

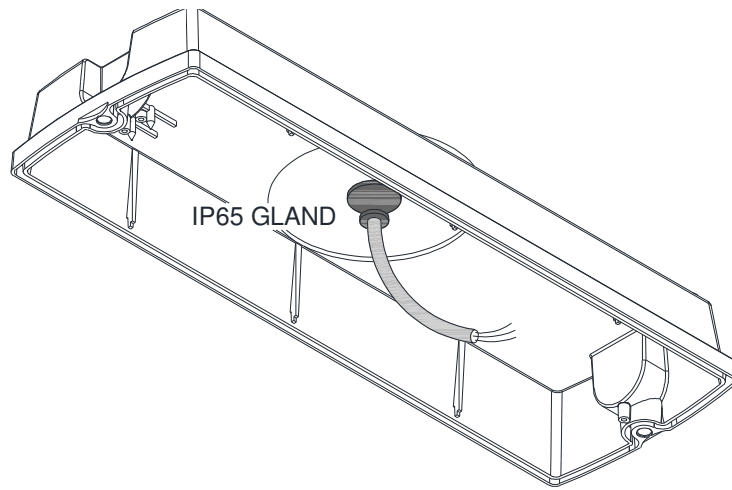


4

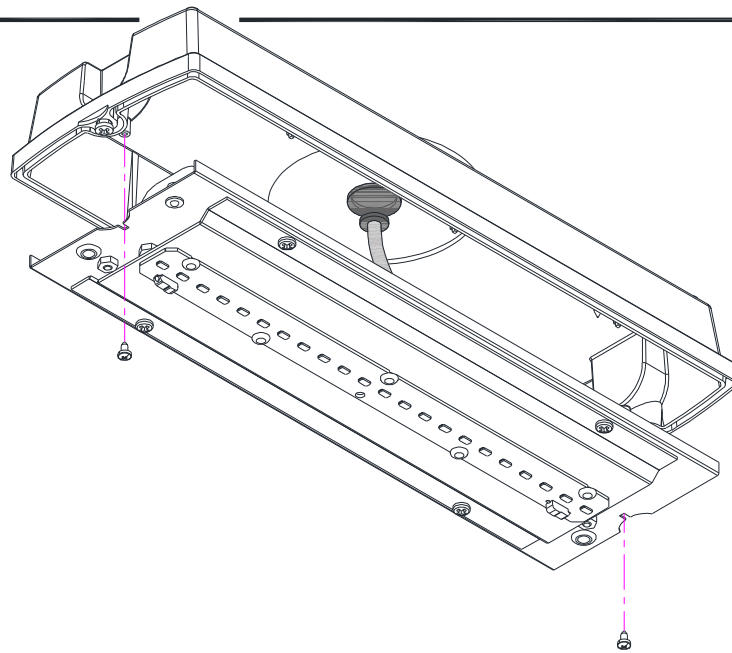

5

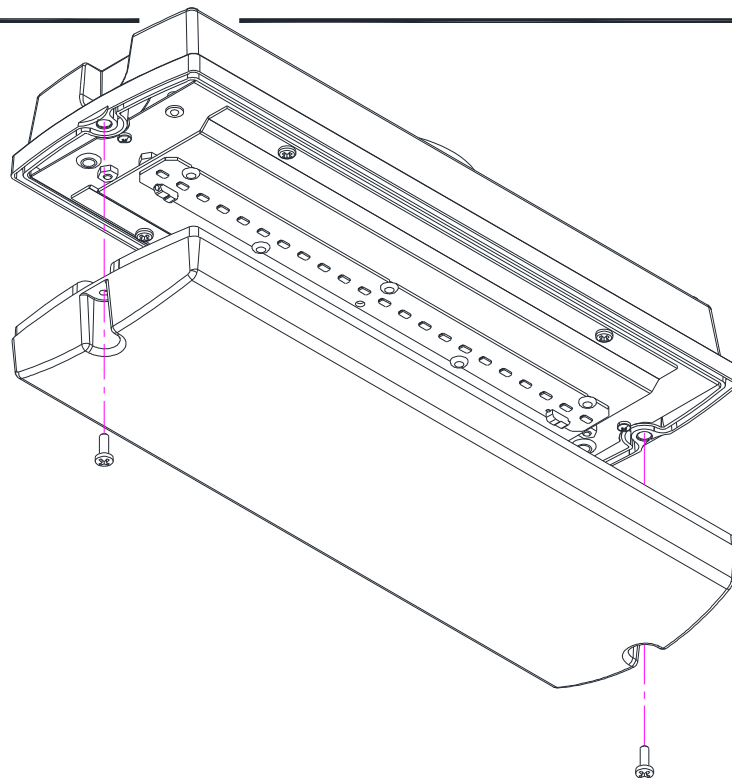

Cleaning Instructions

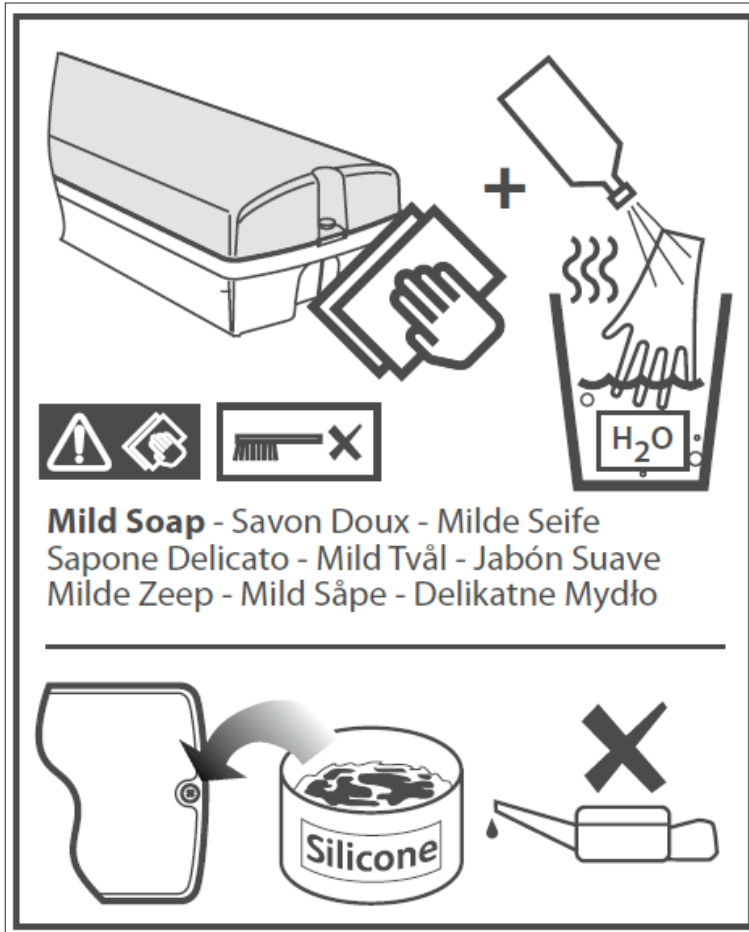

Operation and Maintenance

Continual operation at mains voltages in excess of the rated voltage will reduce LED and expected gear life.

This luminaire uses plastic components in its construction and when installed in environments containing chemicals, degradation may occur.

Please contact our Technical Department for advice.

Modifications

Philip Payne products should not be modified.

Any modification may render the product unsafe and will invalidate any Safety/Approval marks.

Philip Payne will not accept any responsibility for any modified products or for any damage caused as a result of their modification.

Monthly and Annual Tests

Monthly and Annual tests should be carried out in accordance with BS EN 50172:2004, 7.2.

Testing can be carried out by using a sub circuit isolator or by switching off the lighting circuit at the circuit breaker (not for AutoTest or DALI versions).

Battery pack shall be replaced if the specified 3 hour duration is not met.

For replacement battery pack contact Philip Payne Ltd.

The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced.

Important-Safety

**Before carrying out any servicing on this luminaire, ensure that the mains supply is fully isolated.
Disconnect luminaire before insulation testing of the installation.**



Philip Payne Ltd

A SUBSIDIARY OF F.W. THORPE PLC
Thornhill Road, Solihull, B91 2HB, England.

Tel: 0121 705 2384
Fax: 0121 711 2469
e-mail: mail@philippayne.co.uk
Website: http://www.philippayne.co.uk
Philip Payne Ltd registered in England No. 1361523



ISO9001
FM55077



21LFT079_1

Emergency Bulkhead Surface Ceiling

IP65




Class 1




Lantis Series

Downlighter features	Supply voltage	Part No.
NM3	220-240V AC 50/60 Hz	LANT300LN
NM3 AutoTest DALI	220-240V AC 50/60 Hz	LANT300DS

Dimensions

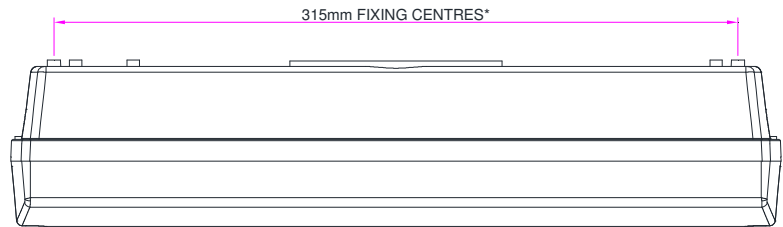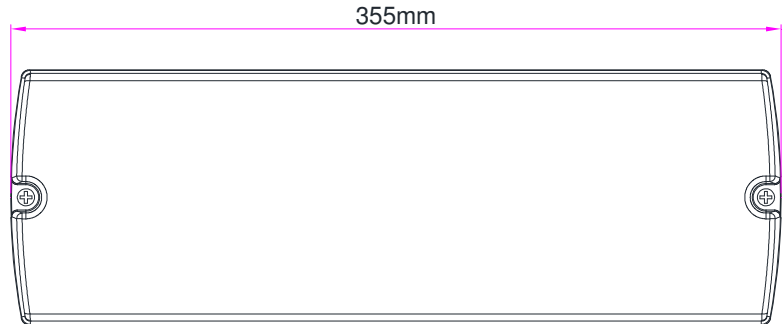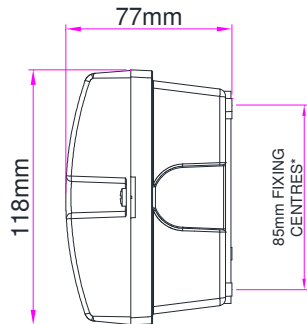


*FIXING HOLES Ø4mm

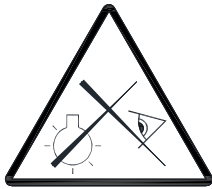


Do not stare at operating lamp.
It may be harmful to the eyes.

Connections

NM3

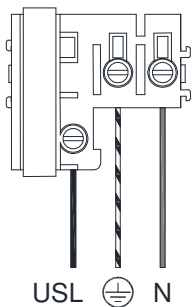

NM3 AutoTest DALI

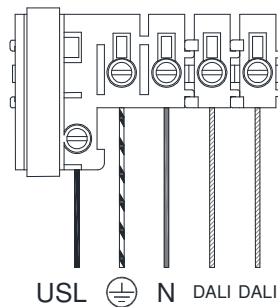


(USL= UNSWITCHED LIVE)


NOTICE TO CONTRACTOR - PLEASE PASS THIS LEAFLET TO THE END-USER.

Installation Method


1

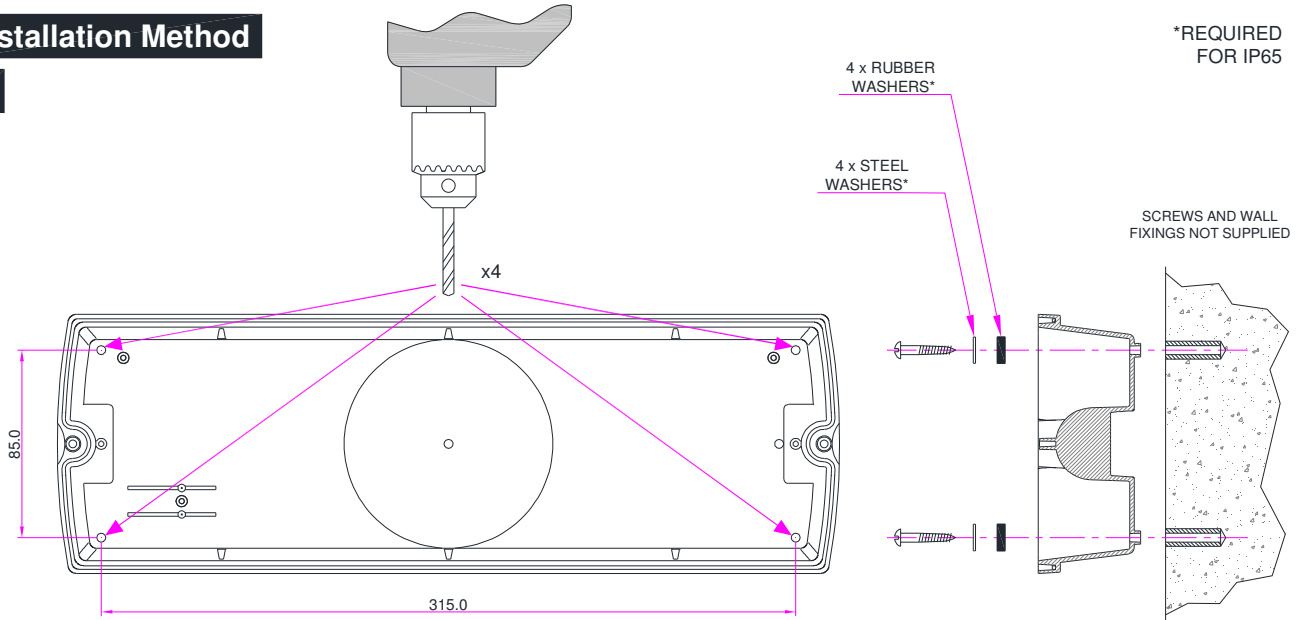



2

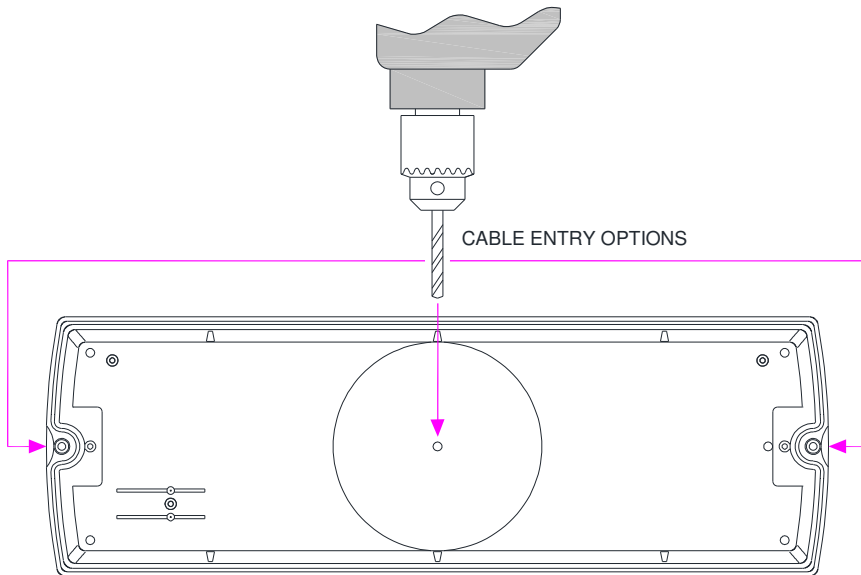


3

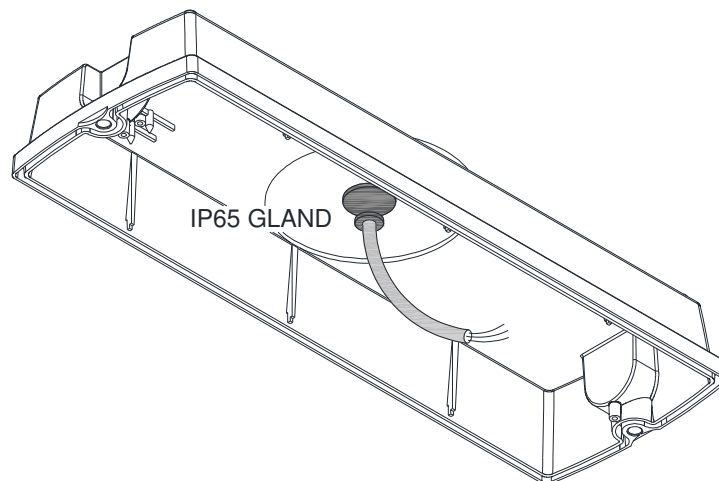


4

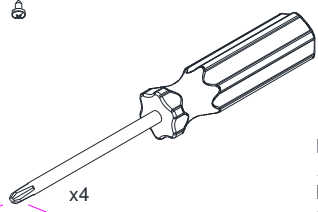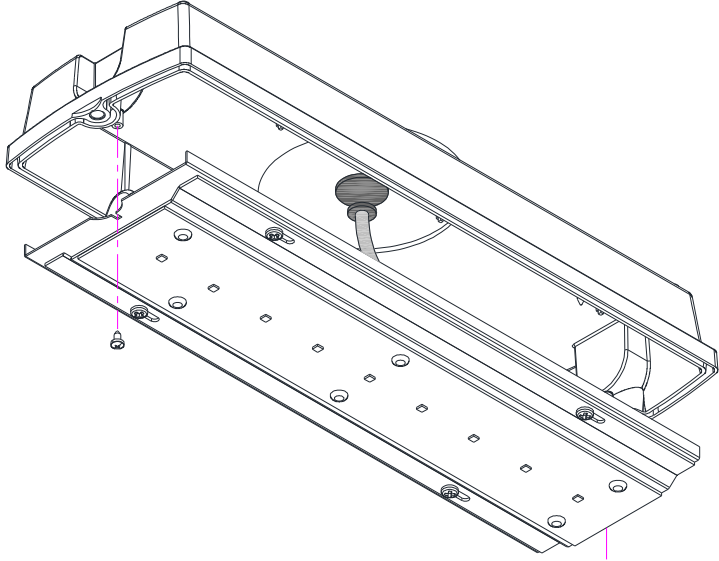

LOOSEN SCREWS ENOUGH TO ALLOW LED BRACKET TO SLIDE. RE-TIGHTEN SCREWS ONCE GEAR-TRAY IS FIXED IN PLACE.

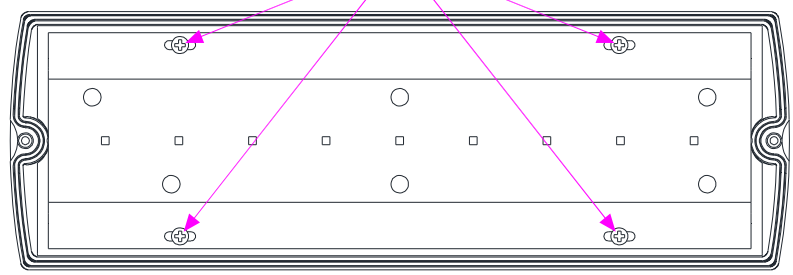


← SLIDE

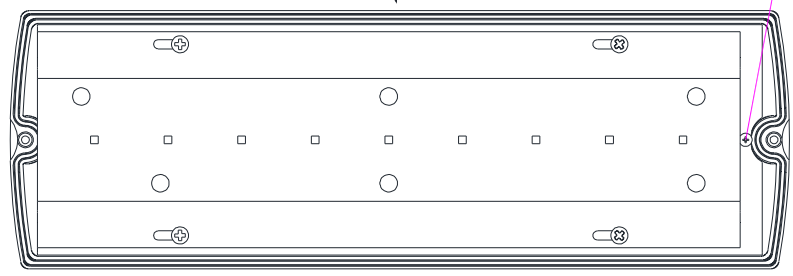


SLIDE LED BRACKET ACROSS TO REVEAL GEAR-TRAY FIXING SCREW.


SLIDE →

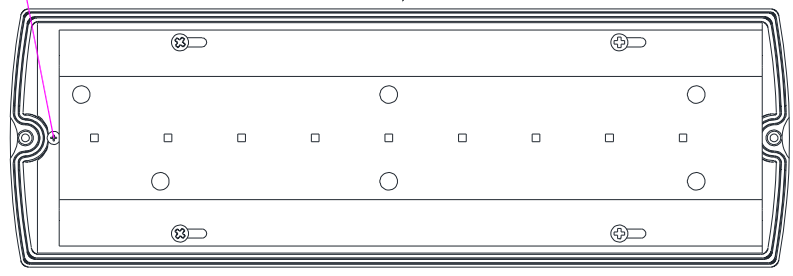


SLIDE LED BRACKET ACROSS TO REVEAL GEAR-TRAY FIXING SCREW.

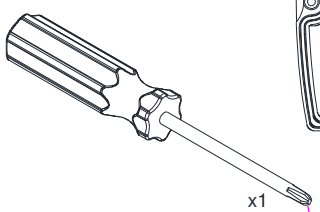

5

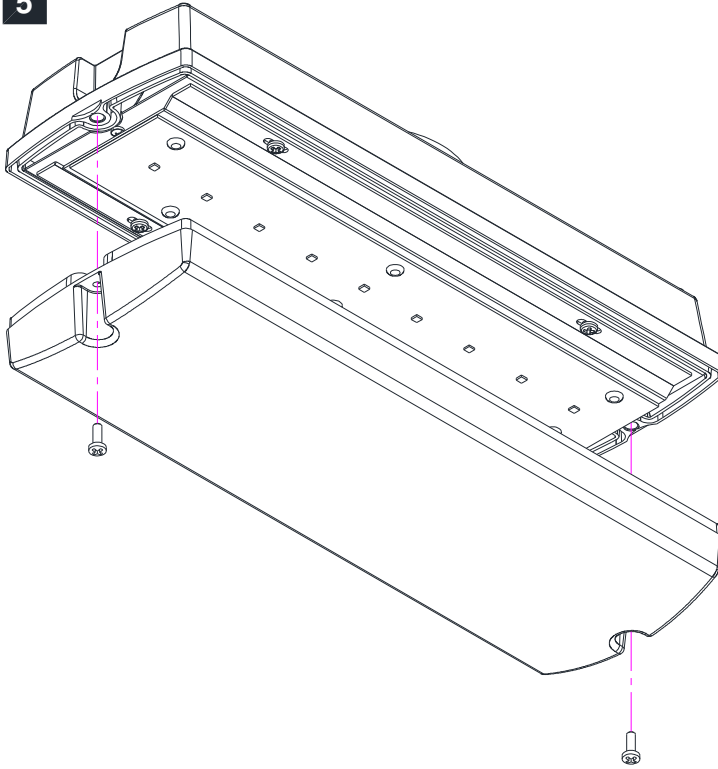

Cleaning Instructions

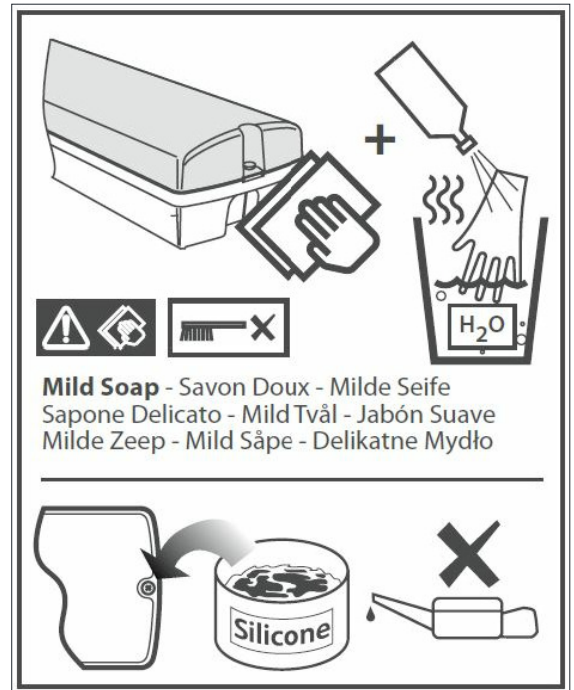

Operation and Maintenance

Continual operation at mains voltages in excess of the rated voltage will reduce LED and expected gear life.
This luminaire uses plastic components in its construction and when installed in environments containing chemicals, degradation may occur.
Please contact our Technical Department for advice.

Modifications

Philip Payne products should not be modified.
Any modification may render the product unsafe and will invalidate any Safety/Approval marks.
Philip Payne will not accept any responsibility for any modified products or for any damage caused as a result of their modification.

Monthly and Annual Tests

Monthly and Annual tests should be carried out in accordance with BS EN 50172:2004, 7.2.
Testing can be carried out by using a sub circuit isolator or by switching off the lighting circuit at the circuit breaker (not for AutoTest or DALI versions).
Battery pack shall be replaced if the specified 3 hour duration is not met.
For replacement battery pack contact Philip Payne Ltd.
The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced.

Important-Safety

**Before carrying out any servicing on this luminaire, ensure that the mains supply is fully isolated.
Disconnect luminaire before insulation testing of the installation.**



Philip Payne Ltd

A SUBSIDIARY OF F.W. THORPE PLC
Thornhill Road, Solihull, B91 2HB, England.
Tel: 0121 705 2384
Fax: 0121 711 2469
e-mail: mail@philippayne.co.uk
Website: <http://www.philippayne.co.uk>
Philip Payne Ltd registered in England No. 1361523



ISO9001
FM55077



21LFT077_1

Emergency Bulkhead Surface Ceiling

IP65


Class 1



Lantis Series

Downlighter features	Supply voltage	Part No.
	220-240V DC/AC 50/60 Hz	LANT350LA
	220-240V DC/AC 50/60 Hz	LANT350DA

Dimensions



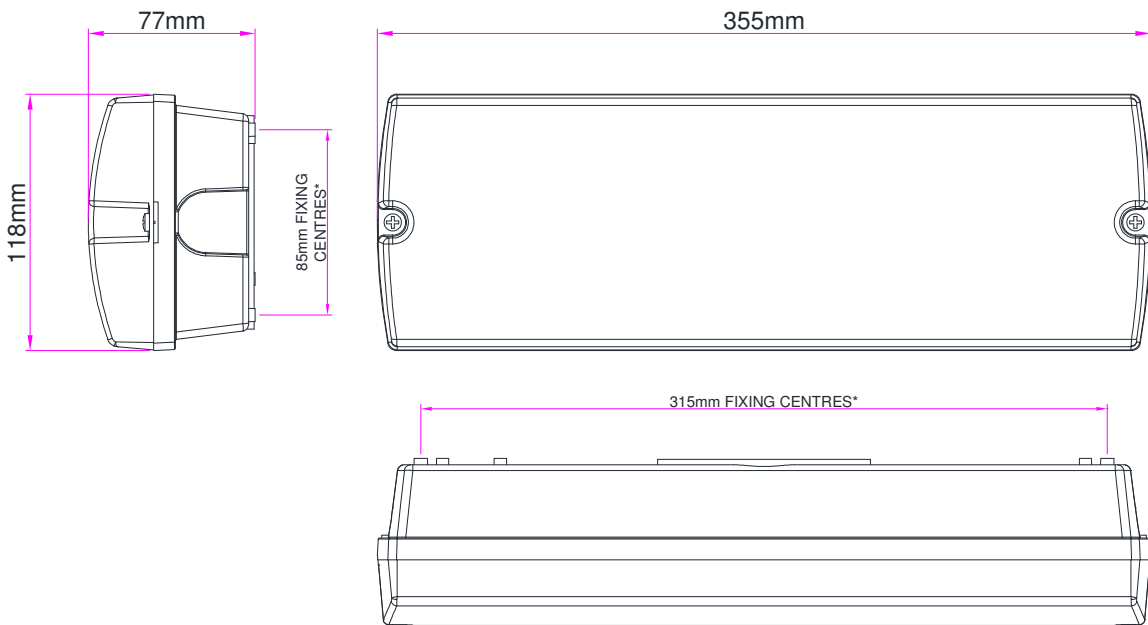


*FIXING HOLES Ø4mm




Do not stare at operating lamp.
It may be harmful to the eyes.

 NOTICE TO CONTRACTOR - PLEASE PASS THIS LEAFLET TO THE END-USER.

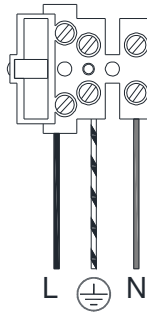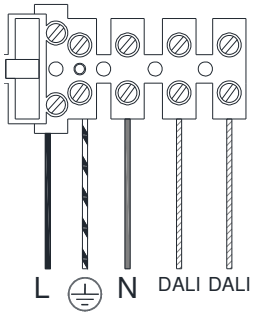


Installation Method


1

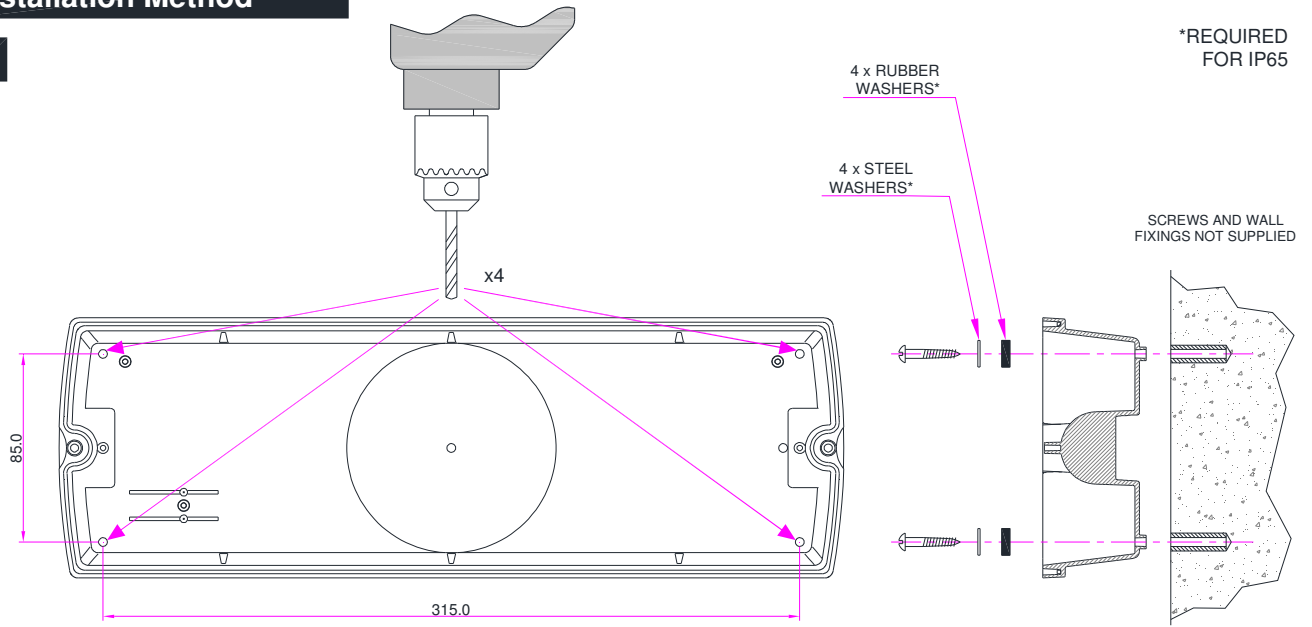


2

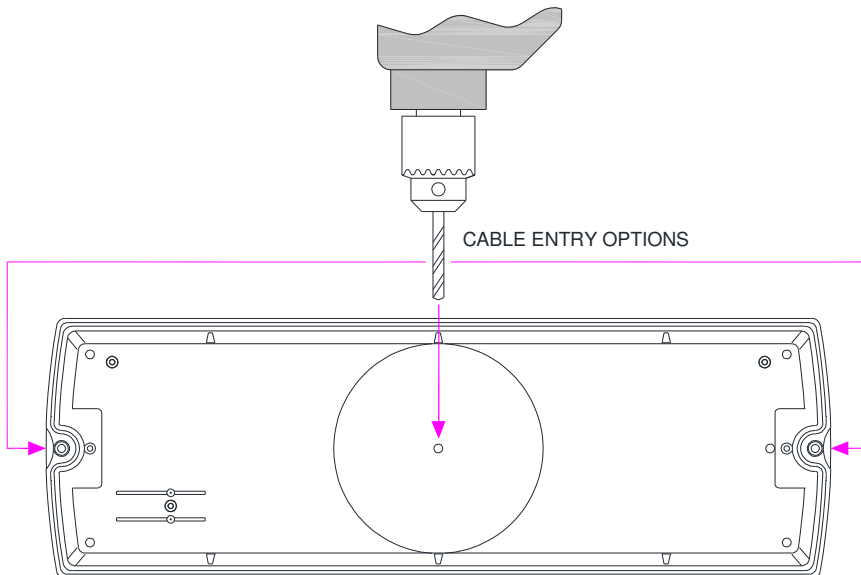


3

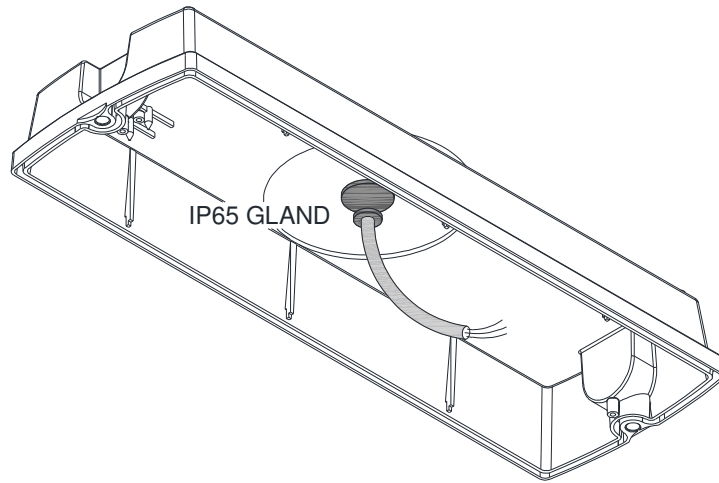


4

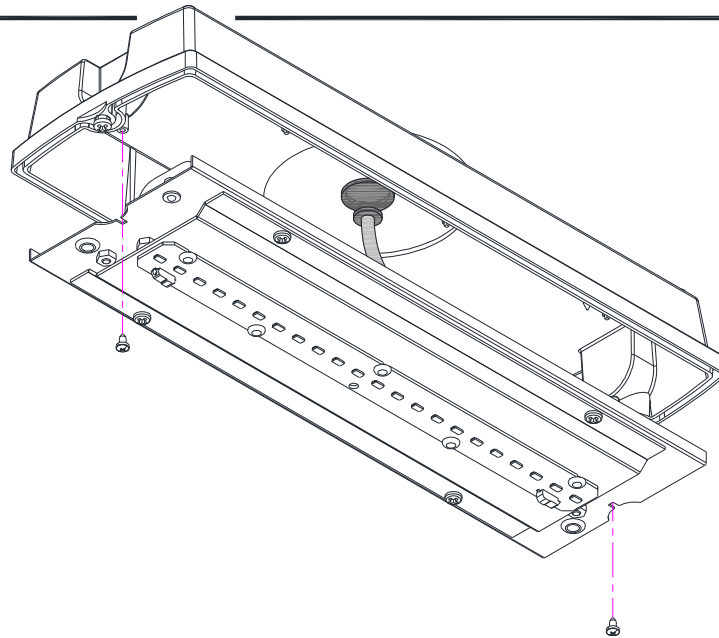

5

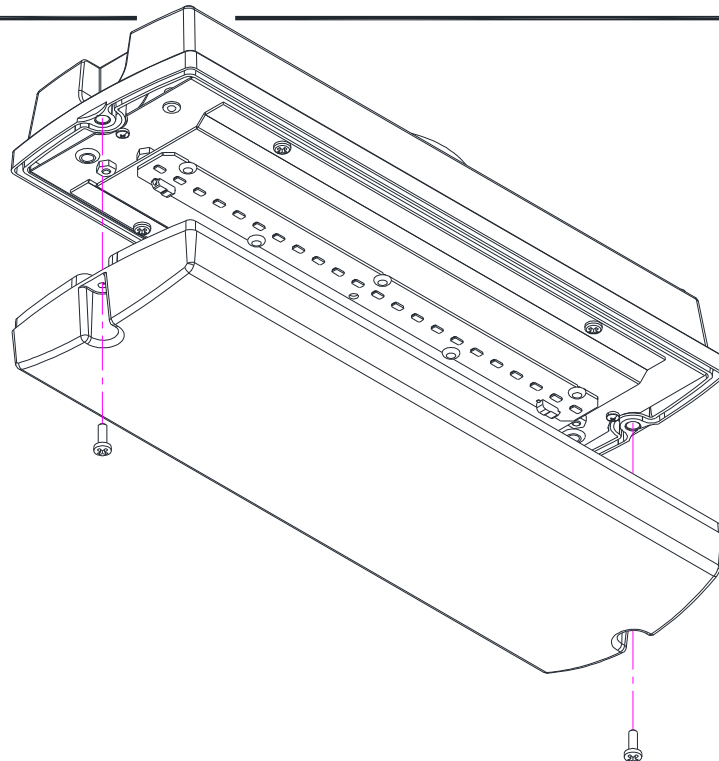

Cleaning Instructions

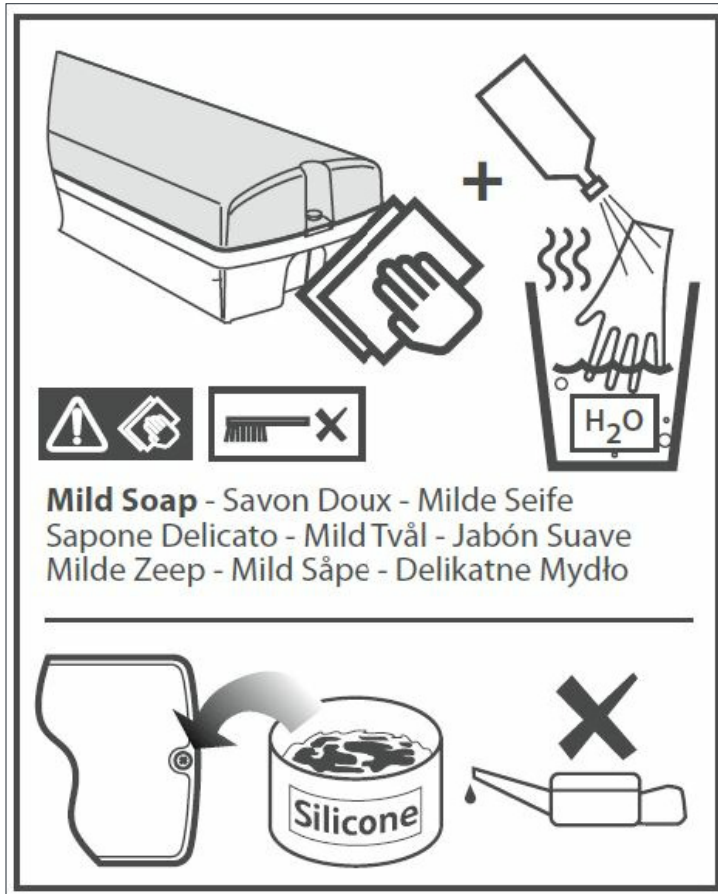

Operation and Maintenance

Continual operation at mains voltages in excess of the rated voltage will reduce LED and expected gear life.

This luminaire uses plastic components in its construction and when installed in environments containing chemicals, degradation may occur. Please contact our Technical Department for advice.

Modifications

Philip Payne products should not be modified.

Any modification may render the product unsafe and will invalidate any Safety/Approval marks.

Philip Payne will not accept any responsibility for any modified products or for any damage caused as a result of their modification.

Monthly and Annual Tests

Monthly and Annual tests should be carried out in accordance with BS EN 50172:2004, 7.2.

Testing can be carried out by using a sub circuit isolator or by switching off the lighting circuit at the circuit breaker (not for AutoTest or DALI versions).

Battery pack shall be replaced if the specified 3 hour duration is not met.

For replacement battery pack contact Philip Payne Ltd.

The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced.

Important-Safety

Before carrying out any servicing on this luminaire, ensure that the mains supply is fully isolated.

Disconnect luminaire before insulation testing of the installation.



Philip Payne Ltd

A SUBSIDIARY OF F.W. THORPE PLC
Thornhill Road, Solihull, B91 2HB, England.
Tel: 0121 705 2384
Fax: 0121 711 2469
e-mail: mail@philippayne.co.uk
Website: <http://www.philippayne.co.uk>
Philip Payne Ltd registered in England No. 1361523



ISO9001
FM55077



21LFT078_1